

 


# Quick Start Guide Owner's Manual

DC-LLJ-YL658-D3


# Quick Start Guide

## Device Layout

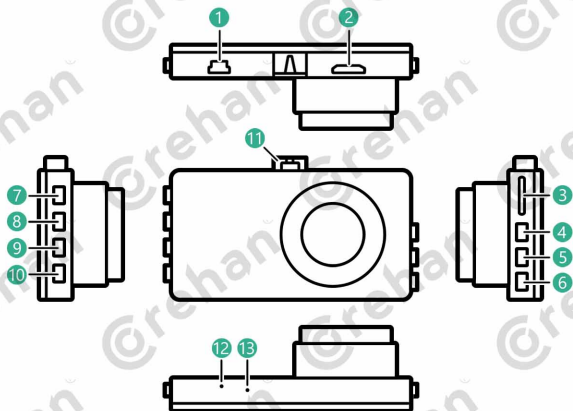

- 1 **USB Port:** Battery charging & power supply
- 2 **Micro HDMI Port**
- 3 **Micro SD Card Slot**
- 4 **UP Button:** Press to navigate UP through options in settings
- 5 **Settings:** Press to enter and exit settings
- 6 **DOWN Button:** Press to navigate down through options in settings
- 7 **OK (Confirm) Button:** Press to confirm a selection while in settings
- 8 **Mode Button:** Press to switch to Video Recording Mode, Photo Shooting Mode and Playback Mode
- 9 **Emergency Lock Button**
- 10 **Power On/ Off Switch:** Press and hold to turn the device on or off
- 11 **Bracket Slot**
- 12 **Reset Button**
- 13 **Microphone**

## Installation

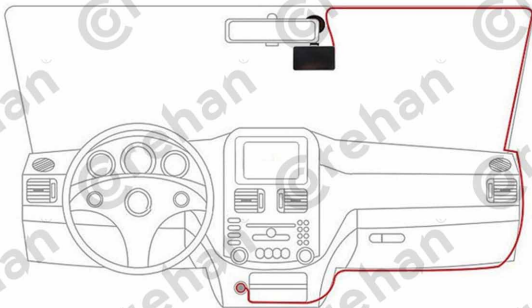 

### Wiring the charger cable

1. Hide the charger cable into the car front panel, as the above picture showed.
2. Connecting the charger to the car's 12V DC outlet.  
Be sure to connect only the Corehan approved charger designed and supplied specifically for using with the device.

 
 
### Attaching the front camera to the window mount

1. Clean windshield before install the camera bracket.
2. Attach the camera bracket on window mount and install the camera with bracket. Make sure that the dash cam placed do not obstructs your view of the road ahead.

#### Tips



Do not attach the bracket sucker across the shading. Otherwise the camera will FALL OFF easily.

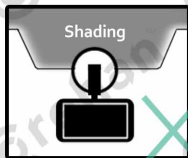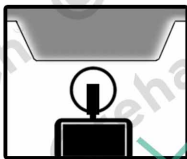


# Micro SD / TF Card Installation

For reliable operation, we recommend to use a Class 10 Micro SD / TF card with a capacity of 8GB, 16GB or 32GB.

Card Capacity	1080P 30FPS	720P 30FPS
8GB	approx 80min	approx 120min
16GB	approx 160min	approx 240min
32GB	approx 320min	approx 480min
 
## Insert or remove a micro SD / TF card

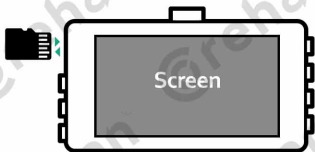

1. Insert a micro SD / TF card with the gold contacts facing the screen side of dash cam D3. Push the card until it clicks into place.
2. To remove the micro SD / TF card, gently push its top edge inward until it clicks, and then pull it out of the slot.



Do not insert or remove the micro SD / TF card when dash cam is powered on, which may damage the card.

## Format micro SD / TF card before use

Format the micro SD / TF card before use with either the dash cam or a computer.  
To use dash cam D3 to format a card:

**OK** to stop the recording **M** twice to select the **FORMAT** option

### Tips



- For a 64GB micro SD / TF card, use a computer to format with FAT 32 file system before using.
- It is recommended to format the card after every time that videos and images are transferred to a computer.

# The Battery

## Charge the battery

Plug the charger into the car cigarette lighter and connect the charger with dashcam D3 to charge the battery of dashcam.



- **Battery is mainly used to save files in emergency.** Please always connect the dashcam to external power while it is in use.
- When dashcam detects no power supply, it will automatically power off after 5 seconds. To turn on the device again, you will need to do so manually by pressing the ON / OFF button.
- If the battery is completely discharged, the dashcam will not turn on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before attempting to turn on the device.
- The device can be used while it is charging, although it may take longer to fully charge the battery.
- The dashcam can be used while it is charging, although it may take longer to fully charge the battery.
- If the dashcam receives an unstable power supply while charging, the screen may not function properly. If this happens, unplug the charger from dashcam.
- While charging, the device may heat up. This is normal and should not affect the device's performance or lifespan.

### Tips



The maximum working temperature of D3 is 155°F (70°C). It's recommend to remove the dashcam when parking the car under high temperature in summer outdoors.

# Owner's Manual

# Contents

Warnings .....	9
About This Manual .....	10
Icons on Screen .....	11
Specification .....	12
<b>Basic Operation &amp; Mode Switch</b>	
Turning the D3 ON and OFF .....	13
Video recording mode .....	13
Photo shooting mode .....	14
Playback mode .....	14
Emergency lock mode .....	14
<b>Settings of Video Recording Mode</b>	
Resolution .....	15
Loop recording .....	15
HDR .....	16
Motion detection .....	16
Record audio .....	17
Date stamp .....	17
G-sensor .....	18
Parking monitor .....	18
<b>Settings of Photo Shooting Mode</b>	
Capture mode .....	19
Resolution .....	19
Sequence .....	19
Quality .....	20
Sharpness .....	20
White balance .....	20
Color .....	21
ISO .....	21
Exposure .....	21
Anti-shaking .....	22



# Contents

## Settings of Photo Shooting Mode

Date stamp .....	22
------------------	----

## Settings of Playback Mode

Delete .....	23
Protect .....	23
Slide show .....	23

## System Settings

Date/Time .....	24
Car No. stamp .....	24
Auto power off .....	24
Beep sound .....	24
Language .....	25
Frequency .....	25
Screen saver .....	25
Format .....	26
Default setting .....	26
Version .....	26

## Firmware Update & Trouble Shooting

Firmware update .....	27
Trouble shooting .....	27

## Warning

**Failure to comply with safety warnings and regulations can result in serious injury or death.**

- Do not use damaged power cords or plugs, or loose electrical sockets.
- Do not touch the car charger with wet hands or disconnect the charger by pulling the cord.
- Do not use a bent or damaged car charger.
- Do not use your device while it is charging if you have wet hands.
- Do not short-circuit the charger or the device.
- Use only manufacturer-approved batteries, chargers, accessories, and supplies.
  - Using generic chargers may shorten the life of your device or cause the device to malfunction. They may also cause fire or cause the battery to explode.
  - Use only the manufacturer-approved charger specifically designed for your device. Using an incompatible charger can cause serious personal injury or damage to your device.
  - Corehan cannot be responsible for the user's safety when using accessories or supplies that are not approved by Corehan.
- Do not drop the charger or device, or subject them to impact.
  - Never crush or puncture the device.
  - Never dispose of the device in a fire.
  - Never place the device in or on heating devices, such as microwave ovens, stoves, or radiators. The device may explode if overheated. Follow all local regulations when disposing of a used device.
  - Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.
- Protect the device and charger from damage.
  - Avoid exposing your device to excessive cold or heat. Extreme temperatures can damage the device and reduce the charging capacity and life of your device.
  - Do not allow children or animals to bite or chew the device. Doing so can result in fire or explosion, and small parts can be a choking hazard. If children use the device, make sure they use the device properly.
  - Never use a damaged charger.
- Do not handle a damaged or leaking lithium ion (Li-Ion) battery.

## About This Manual

**This user manual describes the device's functions and features in detail. Please read this manual before using the device to ensure safe and proper use. Note that all descriptions included here are based on the device's default settings.**

- Images and screenshots may differ in appearance from the actual product. Content may differ from the final product or from software provided by service providers, and is subject to change without prior notice.
- For the latest version of this manual, refer to the Corehan official website at [www.corehan.com](http://www.corehan.com)
- Available features and additional services may vary by device and software.
- Corehan is not liable for performance issues or incompatibilities caused by failure to install the device as stated in this manual. Attempting to customize the installation may cause the device or applications to work improperly, which may result in device malfunctions and data corruption or loss. These actions are violations of your Corehan agreement and will void your warranty.
- Default applications that come with the device are subject to updates and possible discontinuation of support without prior notice. If you have questions about an application provided with the device, contact us via the email address from our website [www.corehan.com](http://www.corehan.com)

## Icons on Screen

### Video Recording Mode



Video recording mode



Video resolution



Loop recording



Motion detection



Hight (wide) dynamic range



G-sensor



Parking monitor



SD card inserted



Battery level



Battery charging



Microphone on



Microphone off



Motion detecting (Yellow)



Recording (Red)



Emergency lock mode

### Photo Shooting Mode



Photo shooting mode



Anti-shaking on



Anti-shaking off



Photo resolution



Sequence

### Playback Mode



Playback mode



Video playing stop



Next video



Video play



Previous video





Volume

## Specification

Image Sensor	3Mp CMOS
Lens	Fixed-focus F1.8 F=2.68
CPU	Novatek NT96658
Screen LCD	3 inch with TFT LCD
Viewing Angle	Maximum 170 degree
Audio	Build-in microphone and speaker
Memory Card	Class 6 or above, up to 64GB
Video Resolution	1920×1080P 30FPS, 1280×720P 30FPS, 848×480P 30FPS, 640×480P 30FPS
Video Format	MOV
USB	Mini USB port, usb 2.0
HDMI	Mini HDMI port
Language	English, Chinese, French, Spanish, Portuguese, German, Italian, Russian, Japanese
G-sensor	Supported
High Dynamic Range	Supported
Date Stamp	Supported
Loop Recording	Supported
Battery	300mAh 5V rechargeable lithium ion battery
Working Temp.	15 °F~155°F (-10 °C~70°C)

# Basic Operation & Mode Switch

## Turning the D3 ON and OFF











1. Press and hold the  button for a few seconds to turn on D3. To turn off the D3, press and hold the  button for a few seconds again.
2. **Camera switch on and off automatically**
  - When you car starts up and the charger connect with 12V DC power supply, the camera switches on automatically.
  - Camera switches off automatically after car flameout for out of charging power supply.

### Tips



If **Parking Monitor** is enabled, the device would starts up automatically when detecting vibration.

## Video recording mode

1. When device in Video Recording Mode and start video recording, there is a red dot flashing  on the top left corner of screen.  
**In Video Recording Mode:**
  - The button  is available for switching off the device.
  - **The button  is available for being out of or continued Video Recording.**
  - The buttons  &  are available for camera zooming in and out.
  - The button  is available for geting into Emergency Lock Mode.
  - The button  is available for switching microphone on or mute.
  - The button  is unavailable.
2. Get into or get out of Video Recording
  - Charging or switching on D3, it gets into Video Recording Mode automatically after 2 seconds with no operation.
  - Press the  button once to get out of video recording. Press the  button again to get into video recording mode and start video recording.


### Tips



If **Montion Detection** is enabled, the device would get into Video Recording automatically by detecting a change on monitor. And would get out of Video Recording automatically by detecting no motion/everthind stay on monitor.  
For more infomration, please refer to the section of Montion Detection.

# Basic Operation & Mode Switch

## Photo shooting mode


1. Switching on or charging the device, and press  button once to get into Photo Shooting Mode.


 
If the device in Video Recording Mode, you have to press  button to get out of Video Recording Mode, and press  button once to get into photo mode.

2. **In Photo Shooting Mode:**








- Press  button to take photo.
- Press  or  buttons to zoom in or out.
- Press  button to get into settings of Photo Shooting Mode.
- Press  button to switch to Playback Mode.

## Playback mode

1. Switching on or charging the device, and press  button twice to get into Playback Mode.

If the device in Video Recording Mode, press  button to get out of Video Recording Mode, and press  button twice to switch to Playback Mode.

2. **In Playback Mode:**

- Press  or  buttons to select the video you are going to play.
- Press  button to start video playing, press the button again to pause video playing.
- Press  button to get into settings of Playback Mode.
- Press  button to stop video playing.
- When in video playing, press  and  to adjust the volume.

## Emergency lock mode

1. In video recording mode, press button  to get into Emergency Lock Mode.  
There is a KEY icon  on top of screen when the device in Emergency Lock Mode.

2. **The videos recorded under emergency lock mode can not be deleted in loop recording.**

The emergency video recording files save in named "RO" document of memroy card automatically.



# Settings of Video Recording Mode

## Resolution

**Recommend setting: 1080FHD**

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **OK** to get into Resolution option
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Resolution.

## Loop recording

**Recommend setting: 3 Minutes**

With Loop Recording Mode enabled, the device will continuously erase older video as it records new video, keeping only the images captured over a userselected time range. All video older than this range will be replaced with new video. (Note: any locked video files on the memory card will remain protected, and will not be automatically deleted during Loop Recording.)

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **▼** or **▲** button to navigate to the Loop Recording option.
4. Press **OK** to get into Loop Recording option
5. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
6. Press **M** to exit Loop Recording.



# Settings of Video Recording Mode

## HDR ( High/Wide Dynamic Range)

### Recommend setting: **ON**

With HDR enabled, this feature automatically adjusts exposure settings to improve recording quality in particularly bright or dim environments, providing balanced lighting and clearer recorded video.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **↓** or **↑** button to navigate to the HDR option.
4. Press **OK** to get into HDR.
5. Press the **↓** or **↑** to make your selection and press **OK** to confirm.
6. Press **M** to exit HDR.

## Motion detection

### Recommend setting: **OFF**

With Motion Detection Mode enabled, the device would get into video recording mode automatically by detecting a movement on monitor. And would get out of video recording mode automatically by detecting being motionless/stayed on monitor.



The **OK** button is available for getting in or out of Video Recording when Motion Detection is enabled.

But the device still would get in or out of Video Recording automatically when detecting a movement or not on monitor.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **↓** or **↑** button to navigate to the Motion Detection option.
4. Press **OK** to get into Motion Detection.
5. Press the **↓** or **↑** to make your selection and press **OK** to confirm.
6. Press **M** to exit Motion Detection.

# Settings of Video Recording Mode

## Record audio

### Recommend setting: ON

To switch microphone on or mute in video recording. Enable this feature to record the audio in video recording mode.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **▼** or **▲** button to navigate to the Record Audio option.
4. Press **OK** to get into Record Audio.
5. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
6. Press **M** to exit Record Audio.

## Date stamp

You have the option to display the date and time in your videos. Note that the date and time stamp cannot be removed from video if this feature was enabled at the time of recording.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **▼** or **▲** button to navigate to the Date Stamp option.
4. Press **OK** to get into Date Stamp.
5. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
6. Press **M** to exit Date Stamp.

# Settings of Video Recording Mode

## G-sensor

**Recommend setting: Low**

This feature acts as an accelerometer, measuring physical and gravitational forces acting on the camera itself. In the event that such forces are detected, the device will perform an automatic file lock.



Locked video files cannot be erased during Loop Recording, they remain on the memory card until manually deleted or the card is reformatted

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **↓** or **↑** button to navigate to the G-sensor option.
4. Press **OK** to get into G-sensor.
5. Press the **↓** or **↑** to make your selection and press **OK** to confirm.
6. Press **M** to exit G-sensor.

## Parking monitor

With Parking Monitor Mode enabled, the device would detect vibration after power off. If it detects a vibration, the device would switch on automatically, get into video recording mode. After recording a 20-second video, device switches off automatically.



- If the battery in device is out of power, device can not switch on automatically even enable Parking Monitor. As there is no charging power when the car is off.
- If Motion Detection is enabled, the device would switch on when detecting vibration, but would not get into video recording mode, unless it detects a movement on monitor.
- The videos recorded under Parking Monitor has been lock, and can not be deleted in Loop Recording.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **M** once to enter the settings of Video Recording Mode.
3. Press **↓** or **↑** button to navigate to the Parking Monitor option.
4. Press **OK** to get into Parking Monitor.
5. Press the **↓** or **↑** to make your selection and press **OK** to confirm.
6. Press **M** to exit Parking Monitor.

# Settings of Photo Shooting Mode

## Capture mode

With this feature you can set a timer for automatically capturing images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **⏮** or **⏭** button to navigate to the Capture Mode option.
5. Press **OK** to get into Capture Mode.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Capture Mode.

## Resolution

This option allows you to set the pixel resolution for captured images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **⏮** or **⏭** button to navigate to the Resolution option.
5. Press **OK** to get into Resolution.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Resolution.

## Sequence

This feature allows you to capture a sequence of 3 quick photos with one button press.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **⏮** or **⏭** button to navigate to the Sequence option.
5. Press **OK** to get into Sequence.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Sequence.

# Settings of Photo Shooting Mode

## Quality

This option allows you to set the quality level of captured images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Quality option.
5. Press **OK** to get into Quality.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Quality.

## Sharpness

This feature will automatically enhance captured images for a clearer, more distinct picture.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Sharpness option.
5. Press **OK** to get into Sharpness.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Sharpness.

## White balance

**Recommend setting: AUTO** (for most situations)

This setting allows you to adjust the lighting balance for different environment.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏏** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the White Balance option.
5. Press **OK** to get into White Balance.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit White Balance.

# Settings of Photo Shooting Mode

## Color

This feature allows you to choose a color effect for captured images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **Q** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Color option.
5. Press **OK** to get into Color.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Color.

## ISO

### Recommend setting: AUTO

This setting enables you to adjust the camera's sensitivity to light when taking photos. The higher the number, the greater the light sensitivity.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **Q** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the ISO option.
5. Press **OK** to get into ISO.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit ISO.

## Exposure

### Recommend setting: +0.0

This setting allows you to adjust the brightness level of captured images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **Q** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Exposure option.
5. Press **OK** to get into Exposure.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Exposure.

# Settings of Photo Shooting Mode

## Anti-shaking

This feature enables the image stabilizer function to reduce blurring of captured images.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **Q** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Anti-shaking option.
5. Press **OK** to get into Anti-shaking.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Anti-shaking.

## Date stamp

You have the option to display the date and time in your captured pictures.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **Q** once to get into Photo Shooting Mode.
3. Press **M** once to enter the settings of Photo Shooting Mode.
4. Press **▼** or **▲** button to navigate to the Date Stamp option.
5. Press **OK** to get into Date Stamp.
6. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
7. Press **M** to exit Date Stamp.



# Settings of Playback Mode

## Delete

The option to delete the recording files.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏮** twice to get into Playback Mode.
3. Press **M** once to enter the settings of Playback Mode.
4. Press **⏮** or **⏭** button to navigate to the Delete option.
5. Press **OK** to get into Delete.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Delete.

## Protect

You have the option to lock the recording files to avoid to be deleted in Loop Recording, or unlock the recording files.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏮** once to get into Playback Mode.
3. Press **M** once to enter the settings of Playback Mode.
4. Press **⏮** or **⏭** button to navigate to the Protect option.
5. Press **OK** to get into Protect.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Protect.

## Slide show

The option to set the period of automatic presentation of recording files.

The procedure to set the recording resolution:

1. Press **OK** once to get out of video recording.
2. Press **⏮** once to get into Playback Mode.
3. Press **M** once to enter the settings of Playback Mode.
4. Press **⏮** or **⏭** button to navigate to the Slide Show option.
5. Press **OK** to get into Slide Show.
6. Press the **⏮** or **⏭** to make your selection and press **OK** to confirm.
7. Press **M** to exit Slide Show.



# System Settings

## Date/Time

The option to set the device's time and date.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **↵** or **⏮** button to navigate to the Date/Time option.
3. Press **OK** to get into Date/Time.
4. Press the **↵** or **⏮** to make your selection and press **OK** to confirm.
5. Press **M** to exit Date/Time.

## Car No. stamp

The option to set car plate number in device.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **↵** or **⏮** button to navigate to the Car No. Stamp option.
3. Press **OK** to get into Car No. Stamp.
4. Press the **↵** or **⏮** to make your selection and press **OK** to confirm.
5. Press **M** to exit Car No. Stamp.

## Auto power off

When enabled, this option allows the device to shut down automatically if Recording Mode is not engaged.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **↵** or **⏮** button to navigate to the Auto Power Off option.
3. Press **OK** to get into Auto Power Off.
4. Press the **↵** or **⏮** to make your selection and press **OK** to confirm.
5. Press **M** to exit Auto Power Off.

## Beep sound

This setting allows you to turn the device's button sound effect on or off.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **↵** or **⏮** button to navigate to the Beep Sound option.
3. Press **OK** to get into Beep Sound.
4. Press the **↵** or **⏮** to make your selection and press **OK** to confirm.
5. Press **M** to exit Beep Sound.

# System Settings

## Language

The option to set the device's language.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Language option.
3. Press **OK** to get into Language.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Language.

## Frequency

**Recommend setting: 60Hz**

This option should be set according to the power supply specification used in your country or geographical region (U.S. users should select the "60Hz" option).

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Frequency option.
3. Press **OK** to get into Frequency.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Frequency.

## Screen saver

**Recommend setting: 30 Seconds**

Select a time duration for the screen to stay lit after recording starts. Press any keys to lit up screen when in screen saver mode.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Screen Saver option.
3. Press **OK** to get into Screen Saver.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Screen Saver.

# System Settings

## Format

This setting is formatting the data in memory card.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Format option.
3. Press **OK** to get into Format.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Format.

## Default setting

Performing this operation will reset all of you device's settings to their original values.

**Note: any user-customized setting will be lost.**

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Default Setting option.
3. Press **OK** to get into Default Setting.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Default Setting.

## Version

Check the firmware version, reference for firmware updating.

The procedure to set the recording resolution:

1. Press **M** twice to enter the System Settings in any mode.
2. Press **▼** or **▲** button to navigate to the Version option.
3. Press **OK** to get into Version.
4. Press the **▼** or **▲** to make your selection and press **OK** to confirm.
5. Press **M** to exit Version.

# Firmware Update & Trouble Shooting

## Firmware update

The following procedure will allow you to use the [www.corehan.com](http://www.corehan.com) to update firmware for your D3 dashcam cam. This is necessary for enabling all available features on your device.

1. Download the firmware file to your computer.
2. Unzip the file.
3. Format your memory card in your computer (or unit).
4. Copy the file to the root of your memory card.
5. Insert the memory card into camera.
6. Power camera on (make sure the camera is in charging with power).
7. The camera will update automatically. The screen will stay off but the status light will light up, it will take 30-60 seconds.
8. (Important) After updating, format the memory card, or the device would get into the procedure of firmware update in everytime switching on.

## Trouble shooting

If you encounter any problems can not be solve on product using, please log in our website [www.corehan.com](http://www.corehan.com) trouble shooing steps section to find the solution for your question.

We keep collecting and answering all the questions from our customer's feedback.

You also can contact us by email: [service.amazon@corehan.com](mailto:service.amazon@corehan.com) for further technical supports.



©2015-2017 Corehan Technology Co., Ltd. All right reserved. Corehan are registered trademarks of Corehan Technology Co., Ltd in the United States and/or other countries. All other registered trademarks are the property of their respective owners. Corehan reserves the right to change, without notice, product offerings or specifications. Complying with all applicable laws is the responsibility of the user.

[www.corehan.com](http://www.corehan.com)